


The following is a description of the bellcrank set up I used in my Be Bop Delux as well as a step by step for bushing leadouts in the bellcrank.

Please understand that there may be other methods of doing this and I can only say that this works for me.

Please feel free to share this Pdf with whoever wants it. I hope this is helpful to everyone.

Bob Johnson


1

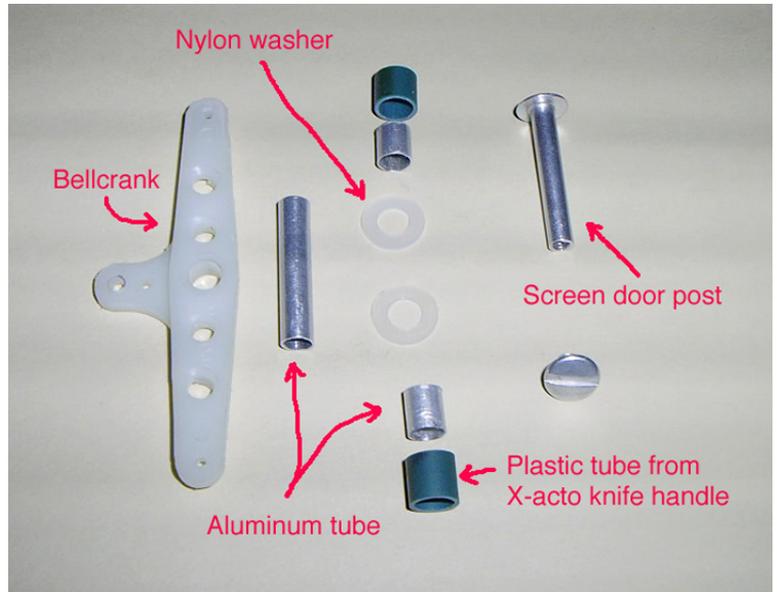


2




3

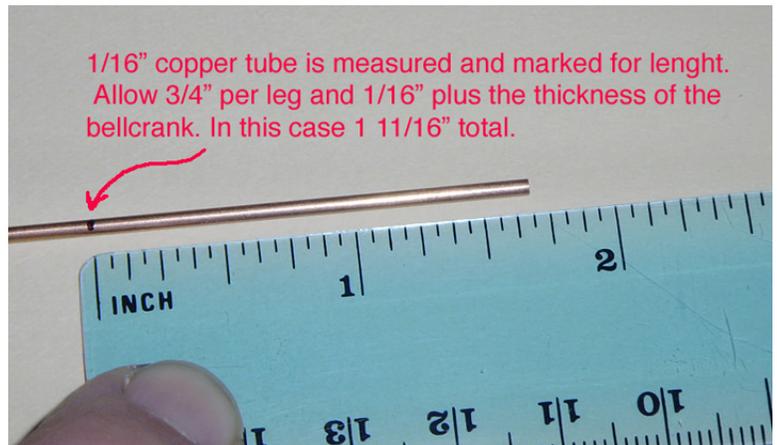


4

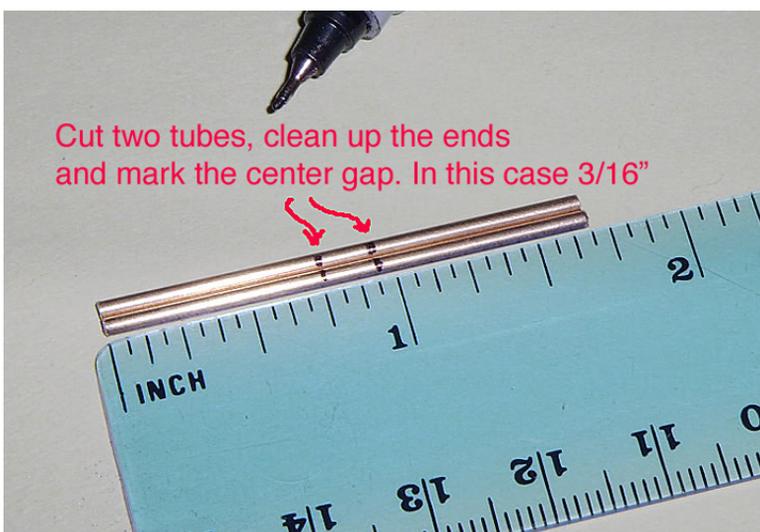


5

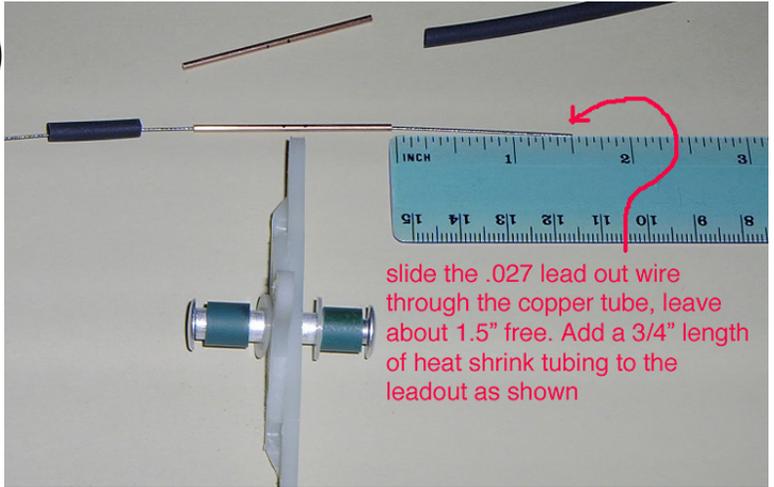


6

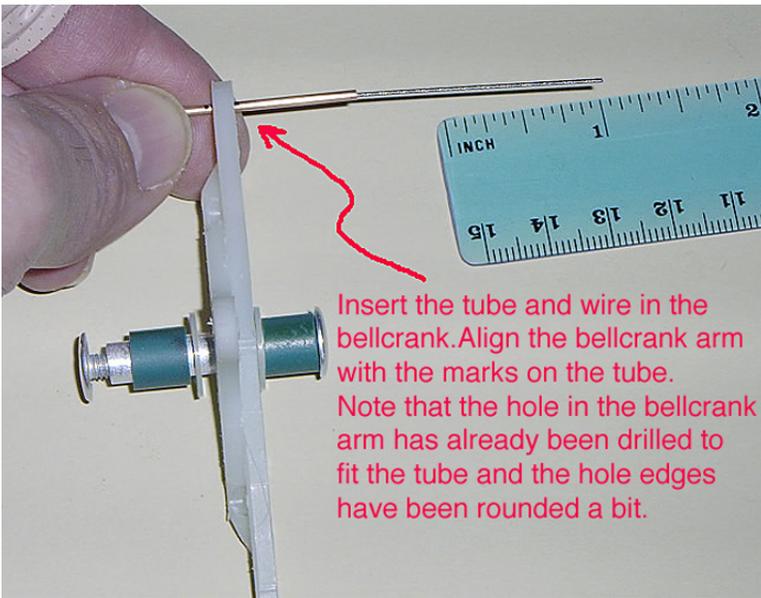


7

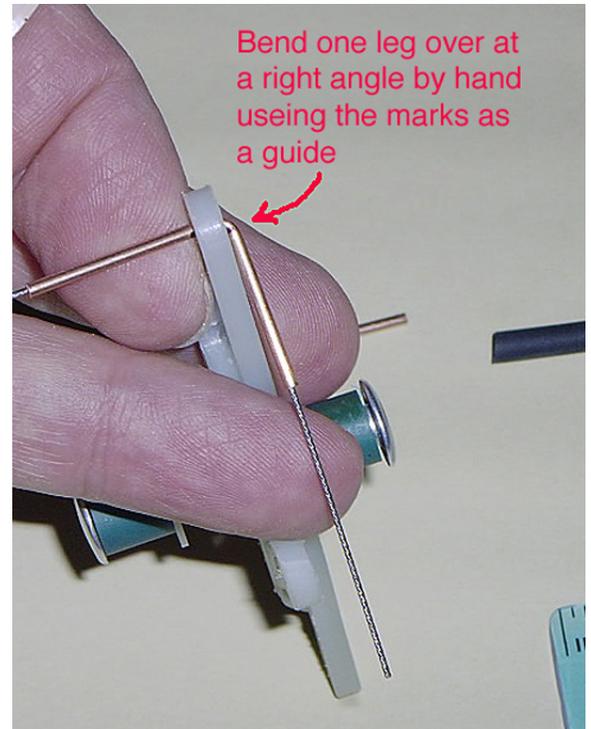


8

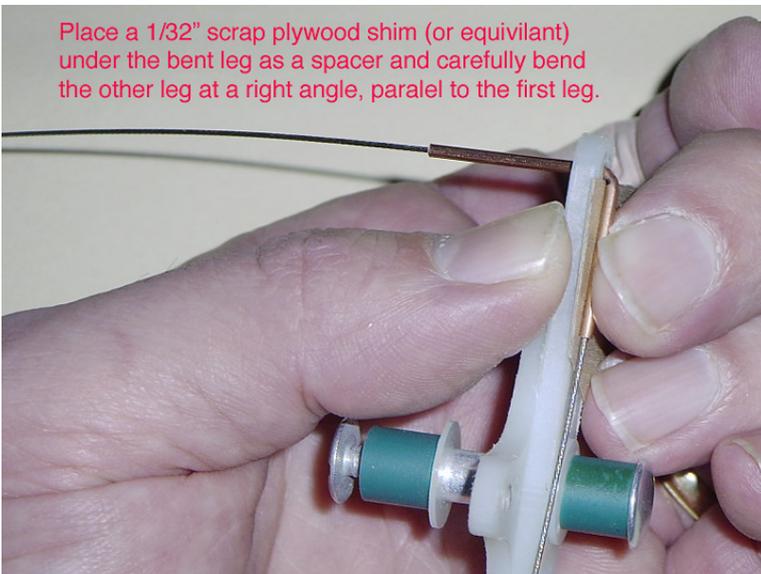


9

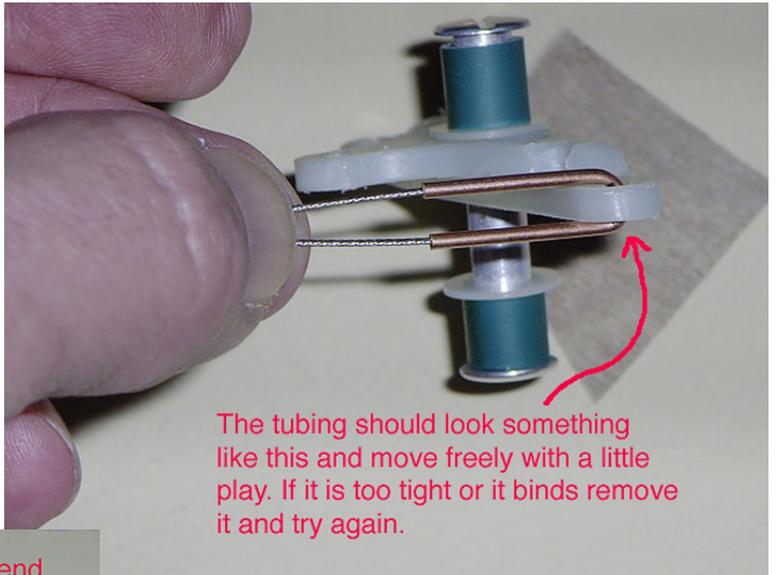


10

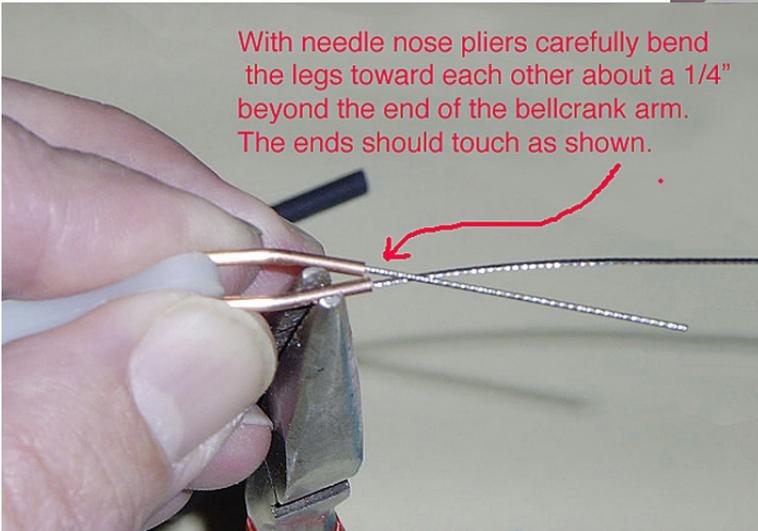


11

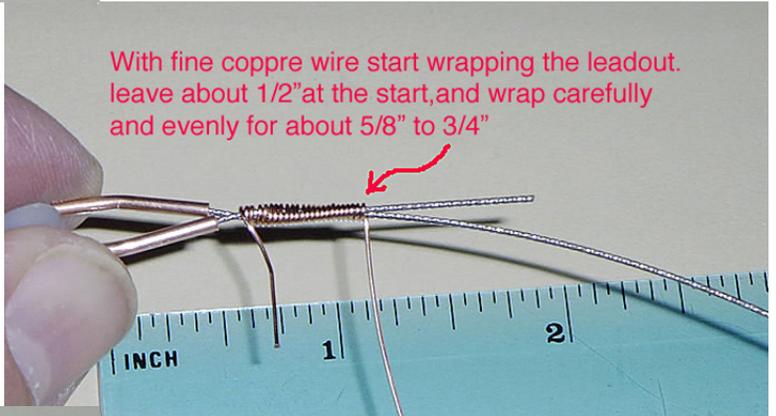


12

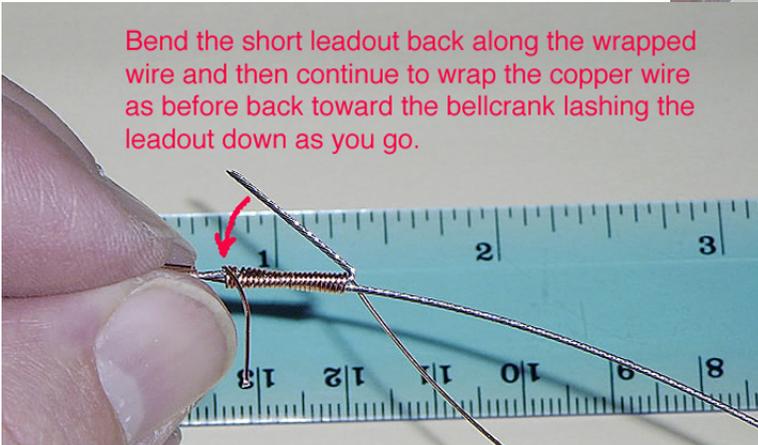

13

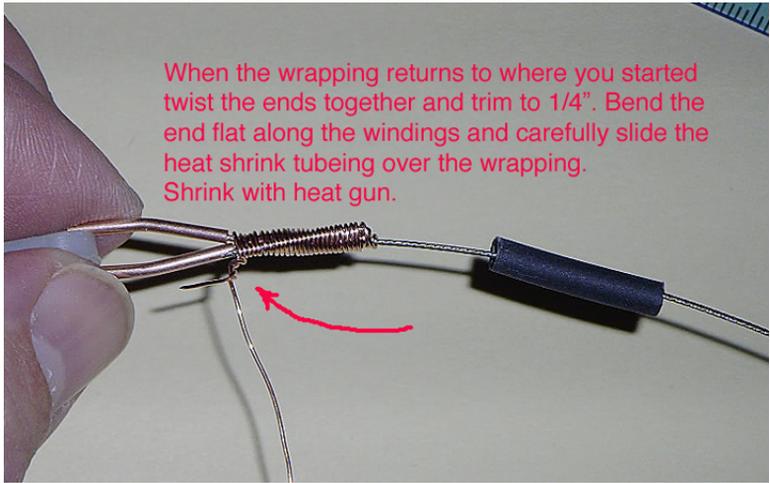

14

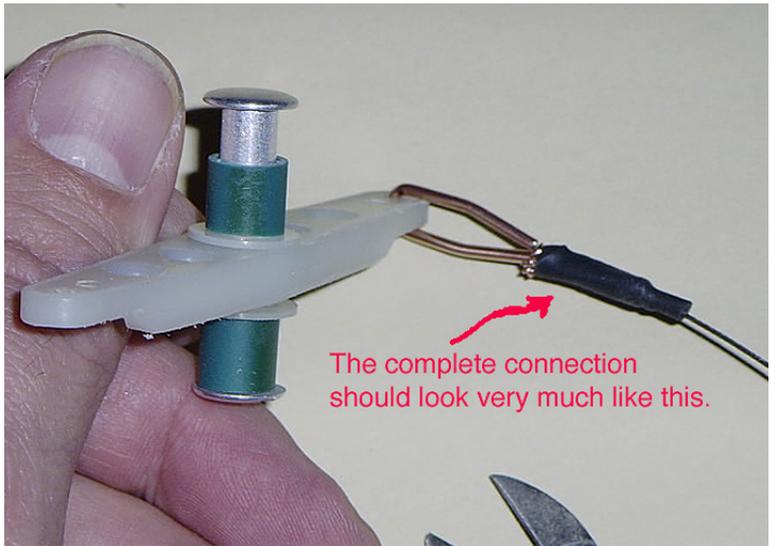

15

